TC-U9AF-JH/Z

 
ZigBee Hooter Sound & Light Alarm Installation Instructions

1. Product introduction

This product is an alarm device with strong universality. It is used with alarm host through wireless mode.

It can realize the function of audible and luminous alarm, and play the role of highpitched distress and deterrent. With anti-stripping function, The appearance is modern design, and alarm volume is loud, suitable for

The appearance is modern design, and alarm volume is loud, suitable for installation in corridors, doors and Windows, family homes, offices, Factories, shops, and etc.



2. Technical Parameters

Alarm sound: 85DB

Working current: monitoring current ≤100 mA Receiving/transmitting distance: ≤80m (open ground)

Protocol: ZigBee proprietary protocol


Working voltage: DC4.5V (Batteries)

Alarm current ≤ 500mA Wireless frequency: 2.4GHz

Network Protocol: Zigbee IEEE802. 15. 4

3. Installation Diagram

From the ground 2.4-4.8 M, Can be installed horizontally or vertically

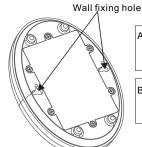

A.Drill holes into the wall according to the fixed hole position

B.Insert the nail and screw the device into the wall

4. Battery Install

When you need to install or replace the battery, please follow the following steps:

- 1. Take down the device;
- 2. Remove the cover with a screwdriver;
- 3.Install 6 section of batteries;
- 4.Fix the cover and install on the wall.



5. Function Operation

Add to Network: Press the Coding button to add the network, and there will be Red LED lights flashing.

Quit Network: Long press Coding button for 10 seconds, red LED lights keeps on.

Long press Coding button more than 10 seconds, The red LED will flash, and it will quit the network.